



FOR MEN



CREW CUT

Model VSM7565A

CREW CUT

The VS For Men Crew Cut is a revolution in home hair cutting. The Super Crew Cut has an enhanced lithium ion power system for advanced cutting performance and precision engineered hardened Japanese steel blades with a unique super sharp cutting angle for smooth, effortless cutting. The clipper's unique rotary blades mean that it can be used in any direction over the head to maintain an all over even cut for grades 1-4.

FEATURES

- Mains or cordless operation.
- Precision engineered hardened Japanese steel blades with a unique super sharp cutting angle for smooth, effortless cutting.
- Lithium-ion technology gives sustained power performance for reliable cordless use, even at lower charge levels.
- Ergonomic design – it fits into the palm of your hand.
- Adjustable lock-in length comb guides for cutting grades 1-4
- Includes separate battery operated trimmer for ears, neckline and sideburns with a 5-position comb guide for cutting lengths 3mm, 6mm, 9mm, 12mm, 15mm.
- Barber's comb.
- Cleaning brush.
- Scissors.
- Storage pouch.
- Oil.
- 3 Year guarantee.

SAFETY CAUTIONS

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- This appliance should only be used as described within this instruction book. Please retain for reference.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped.
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

The clipper is perfect for maintaining a short all over even length. It has been designed with a unique rotary cutting system and circular comb guides to give a guaranteed even finish. Because of this revolutionary technology the cutting technique differs somewhat to that of a normal clipper, in fact this cutting technique is much simpler!

The Crew Cut clipper is designed for cutting grades 1-4 to an all over even length. It is not however, suitable for layering or grading. There is one adjustable comb guide is for grades 1-4. To tidy up your neckline and sideburns just use the trimmer provided.

Hair longer than grade 4 will need to be precut before using the crew cut.

INSTRUCTIONS FOR USE - CLIPPER

Charging Instructions

IMPORTANT! Super Crew Cut is so easy to use, but before you do anything you must take your time to charge the unit for 3 hours before its first use. Even if you want to use it plugged in straight from the mains, this initial super-charge ensures optimum power performance to give smooth fast cutting every time.

Only use the adaptor supplied with this appliance. Using other adaptors may cause a hazard.


- Before using for the first time, the appliance should be fully charged continuously for 3 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Ensure the appliance is switched off.
- Insert the small plug on the charging adaptor into the socket on the side of the appliance.
- Plug the charging unit into a suitable mains socket.
- The red charging indicator light on the power handle will illuminate when the appliance is correctly connected to the mains. When it is fully charged, indicator light will remain on.
- A full charge will supply enough power for approximately 60 minutes of cordless use.
- A quick charge of 30 minutes will give 15 minutes use

Oiling Instructions

IMPORTANT! It is highly recommended before each use to oil the circular blades with the oil provided. This ensures optimum cutting performance.

For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 5 drops of oil around the circular blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread around the entire circumference of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

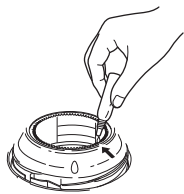

Preserving the batteries

- In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged and then recharged for 3 hours every 6 months approximately.

Comb Guides

This appliance is supplied with 1 adjustable comb guides that provide 4 cutting lengths from grades 1-4.

Cutting Length Grade

3mm #1

6mm #2

9.5mm #3

12mm #4

Attaching a comb guide

To attach the comb guide, make sure the appliance is switched off. Hold the clipper with the blades facing upwards and place the comb guide over the top of the clipper with the teeth of the comb facing upwards.

Release the comb guide locking mechanism, located on the side of the appliance, by sliding it away from the comb guide. Line up position A on the comb guide (fig.1) with position B on the clipper (fig.2) then gently rotate the comb guide in a clockwise direction until it clicks into

place. Make sure that the locking mechanism is in the locked position and the comb guide is securely in place before using the clipper.

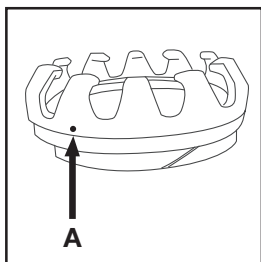


Fig. 1

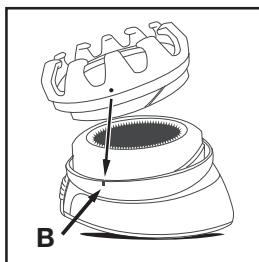


Fig. 2

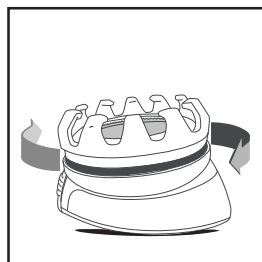


Fig. 3

Changing the comb guide length setting

The comb guides will be marked with its grade settings (fig.4). In order to change the grade setting release the comb guide locking mechanism found on the side of the clipper (fig.5) and rotate the comb guide either clockwise or anti-clockwise as appropriate (fig.6). Line up the grade setting you want with the 'I' mark on the clipper. Make sure that the locking mechanism is in the locked position and the comb guide is securely in place before using the clipper.

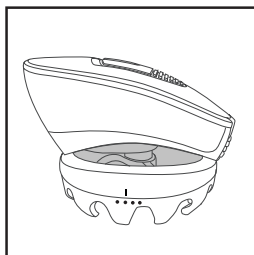


Fig. 4

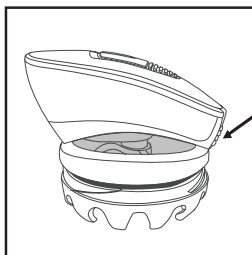


Fig. 5

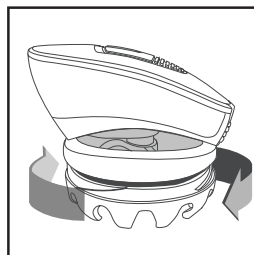


Fig. 6

Removing a comb guide

To remove the comb guide unclip the guide-locking mechanism found on the side of the clipper and rotate the comb guide in an anti-clockwise direction until it is completely free of the clipper.

Preparation for Use

- Always inspect the appliance for noticeable signs of damage.
- Always inspect the appliance before use to ensure the clipper blades are

free from hair, debris etc. (see Cleaning & Maintenance of clipper).

- Ensure the appliance is well oiled (see Oiling Instructions).
- Ensure the appliance is sufficiently charged or plugged into the mains.
- For best performance use on clean, dry hair that has been combed until tangle-free.
- If hair is long, use the scissors and comb provided to cut the hair prior to using the clipper.
- Prior to use always inspect the head for warts, moles, spots and broken skin. If using the clipper on yourself either use mirrors or ask another person to check for you. Special care should be taken when cutting hair in areas that have warts, moles, spots or broken skin, to prevent injury.
- Remove any head jewellery such as earrings and necklaces before use.

NOTE: The appliance should not be used for longer than 20 minutes when operated from the mains.

WARNINGS:

The clipper is for use only on the head. Never use the clipper on the face or any other area of the body.

IMPORTANT: Do not attempt to trim hair close to your ears with the clipper. Never allow ears to enter the ring of the clipper blade.

A separate trimmer has been provided to trim around the ears, the neckline and sideburns.

CLIPPING

- Attach the comb guide and select the cutting lengths e.g .1=3mm, 2=6mm, 3=9.5mm and 4=12mm.
- Switch on the clipper using the on/off sliding switch located on top of the clipper and the blades will start to move and the green LED will illuminate.
- Begin cutting on the top of your head. Slowly and gently steer the clipper around the scalp, taking care on areas where there may be warts, moles, spots and broken skin and keep away from the ears. For best results use in a sweeping motion:
- The clipper can be moved in any direction to cut your hair, for best results we advise you start cutting the back of the head and with a sweeping motion run from the back to the front of your head concentrating on one area until you reach the desired length.
- Once you have completed this over your whole head you should then finish using circular motions as this ensures you achieve a perfect even finish.
- Only apply gentle pressure. Never force the clipper – if resistance is experienced lift clipper away from the head, empty hair from the clipper and resume clipping.
- If using on areas where there are folds of skin, ensure the skin is stretched taught prior to cutting hair in this area.
- If you experience any discomfort stop using immediately.
- Note: Hair will collect in the area inside the blade ring. This may need to be emptied before all the hair has been cut. Switch the clipper off and remove any hair by simply tapping gently on the top of the clipper.
- If you require a grade 0 cut, the clipper can be used without a comb guide attached.

Please Note: When you first begin cutting your hair you may notice that some hair is being cut and other hairs are left long.

This is perfectly normal, especially if you are cutting longer hair.

This is because hair grows in different directions and the Super Crew Cut clipper is designed to be used in all directions against the hair growth. So continue cutting in a back and forth sweeping motion until all hair is cut to length, then the use of circular motions over the whole head will ensure an even finish.

CLEANING & MAINTENANCE OF CLIPPER

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse the comb guide under running water and dry thoroughly before storage or use.
- Never place the clipper under running water.
- After each use ensure hair is emptied from the blade area and use the cleaning brush to clean thoroughly.
- It is highly recommended to apply a small amount of oil (provided) to the blades before each use.
- Wipe the outside with a damp cloth and dry thoroughly before use or storage.

INSTRUCTIONS FOR USE - TRIMMER

- The battery compartment cover is located on the underside of the trimmer.
- Push the tab downwards and slide it open, then remove the cover.
- Insert 2xAA batteries as indicated in the battery compartment.
- Replace the battery cover by placing it over the compartment and slide up until it clicks shut.
- If the appliance remains unused for a while or if the batteries have run down, remove them from the appliance. This will increase the life of the product.
- When the batteries have run down, they should be disposed of at a recycling centre to safeguard the environment. If the batteries leak avoid touching them and dispose of them at a recycling centre.

Preparation for Use

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
- Ensure the heads are free from hair and debris and that the blades are properly oiled (refer to Cleaning & Maintenance of Trimmer section for further information).
- Use on clean, dry hair that is tangle-free.

Trimming

To trim hair

- Ensure the appliance is switched off.
- Attach the 5-position comb guide as required. This provides the following cutting lengths (3, 6, 9, 12, 15mm).
- Slide the comb guide onto the front of the Precision Trimmer head until the guide can be pushed no further.
- The 5-position comb guide will be set to the shortest of the five cutting lengths.
- To adjust the cutting length, push and click the guide forward to the required position as marked on the side of the comb guide i.e 1=3mm, 2=6mm, 3=9mm.
- To remove the comb guide, push the guide forward and off the precision trimmer head.
- Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
- Move through the hair, against the direction of hair growth, using only light pressure.
- The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.
- Never switch the appliance off whilst in the hair.

To outline

- Do not attach a comb guide.
- Hold the trimmer upside down, gently flat against the skin.
- Move the trimmer in a downward direction.
- Having defined the outline, hold the trimmer with the teeth pointing upwards, yet flat against the skin and move the trimmer upwards against the direction of hair growth. This will trim the unwanted hair adjacent to the outline.

CLEANING & MAINTENANCE OF TRIMMER

To maintain optimum performance, the trimmer should be cleaned after each use.

- Remove comb guide after use.
- Use the cleaning brush to remove any hair from the guide.
- The guide may be rinsed under running water, but must be completely dry before storage or use.
- Do not place the trimmer itself under running water.

Trimmer Head:

- Ensure the appliance is switched off.
- To remove the trimmer head, hold the handle of the appliance with one hand, with the blades facing upwards and carefully push the head away from the trimmer handle.
- Use the cleaning brush to remove any hair from the trimmer head and blades.
- Once the head has been removed from the trimmer handle only the head can be rinsed under the tap using tepid water, but must be completely dry before storage or use.
- Use the cleaning brush to remove any hair from the trimmer head and blades.
- After cleaning, switch on and oil blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed trimmers and does not evaporate or slow the blades. Wipe off any excess oil.

BATTERY DISPOSAL

The appliance contains Li-ion battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



Li-ion

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

LIMITED THREE YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence
by Conair

CONAIR®

©2014
Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159,
Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247